




INSTALLATION INSTRUCTIONS - F1211ADE10AL



INSTALLATION INSTRUCTIONS

Part No. F1211ADE10AL

KIA Sportage 2016-

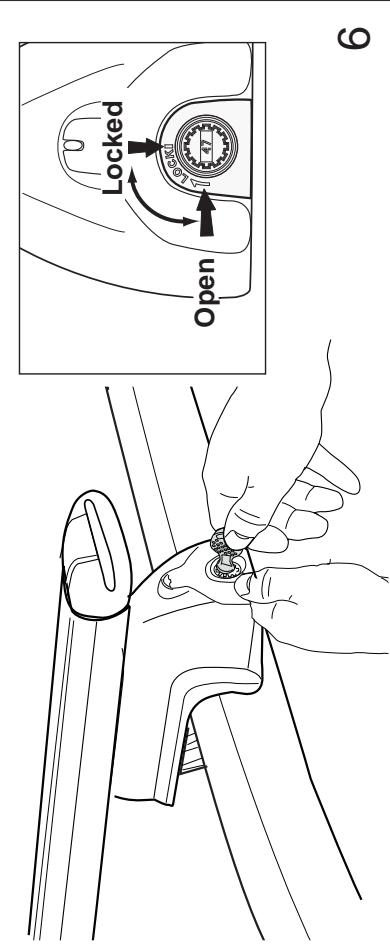


CHECK!

(DE) Montageanleitung für Lastenträger	(CZ) Pokyny pro upevnění nosiče
(FR) Instructions de montage pour les barres de toit	(DK) Monteringsvejledning for tagbagagebærer
(NL) Montage-aanwijzingen voor de alleesdrager	(FI) Taakkatelineen kiinnitysohjeet
(GB) Fitting instructions for Loadcarrier	(GR) Οδηγίες τοποθέτησης Σύγκρατ Αυτοκοντρόν
(ES) Instrucciones de montaje del porta-esquis	(NO) Monteringsinstruksjon for lastholder
(IT) Istruzioni di montaggio del Portabagagli	(PL) Instrukcja instalacji bagażnika na relingu
(SE) Monteringsanvisning för Lasthållare	(RU) Инструкции по установке

Page 2 - 7 15 Minutes	Page 8 - 13 < 5 Minutes
--------------------------	----------------------------

1512-151629-1

INSTALLATION INSTRUCTIONS - F1211ADE10AL

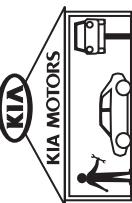





Page 2 - 7



15 Minutes




INSTALLATION INSTRUCTIONS - F1211ADE10AL

INSTALLATION INSTRUCTIONS - F1211ADE10AL

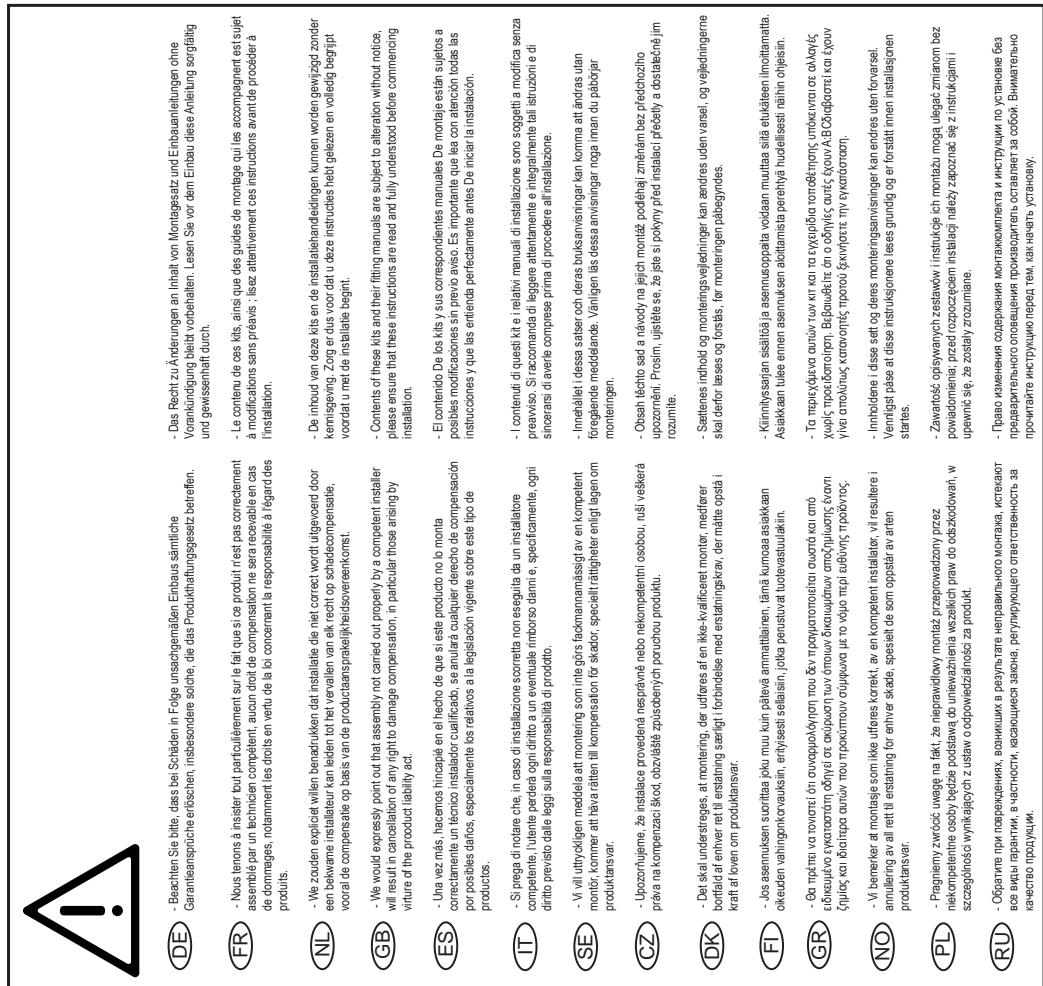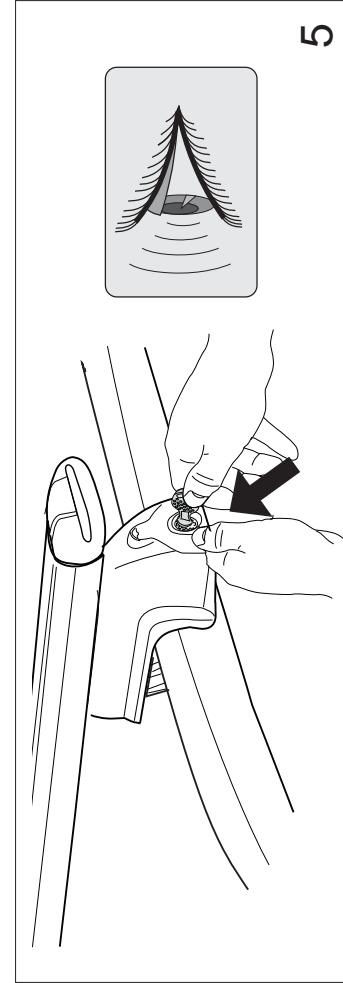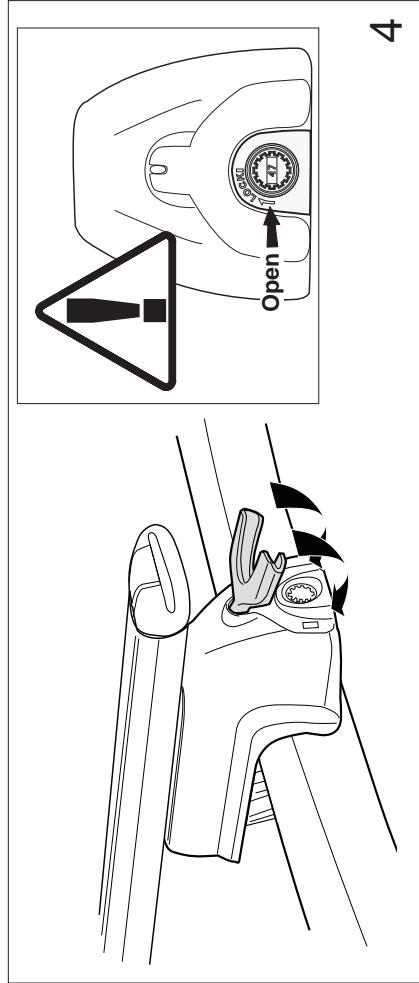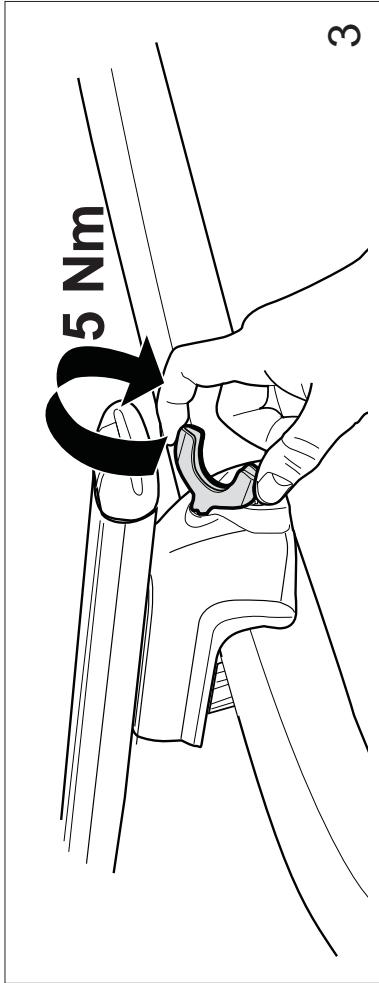




INSTALLATION INSTRUCTIONS - F1211ADE10AL

INSTALLATION INSTRUCTIONS - F1211ADE10AL

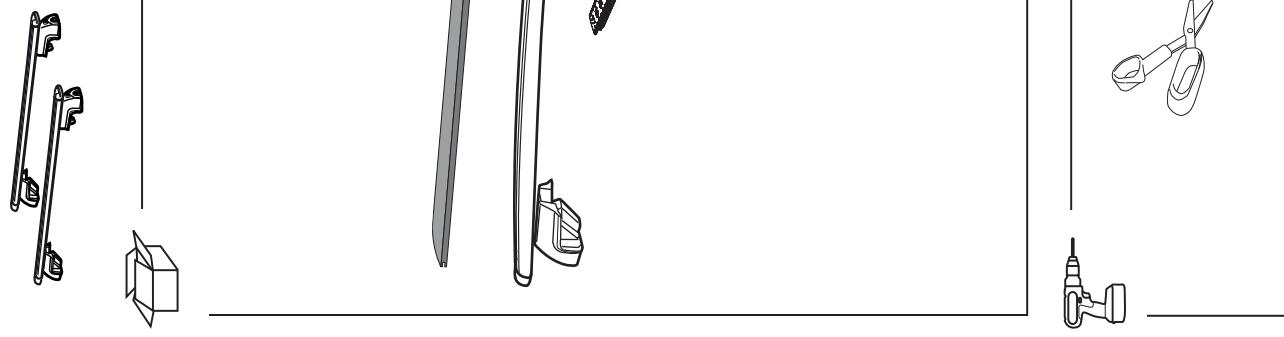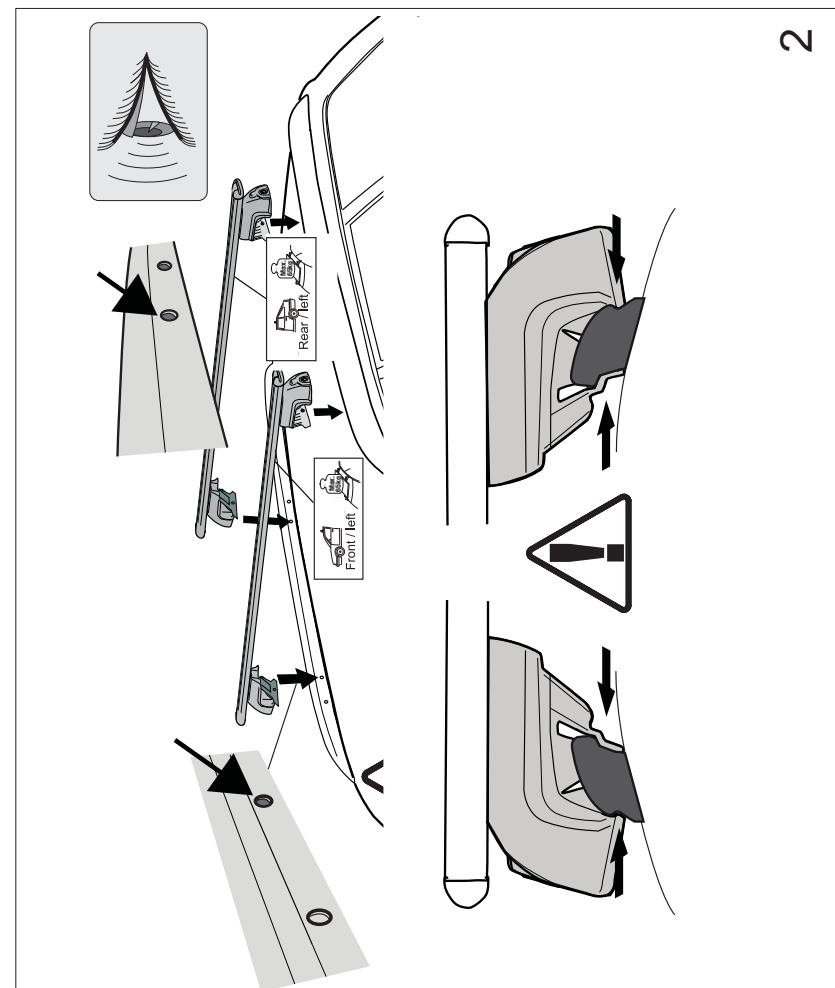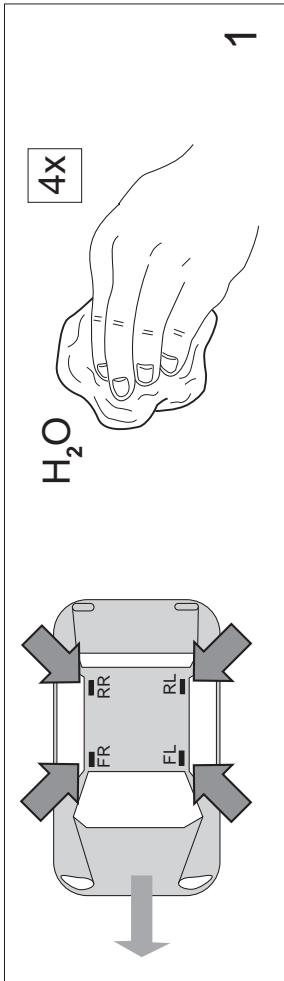


INSTALLATION INSTRUCTIONS - F1211ADE10AL

INSTALLATION INSTRUCTIONS - F1211ADE10AL

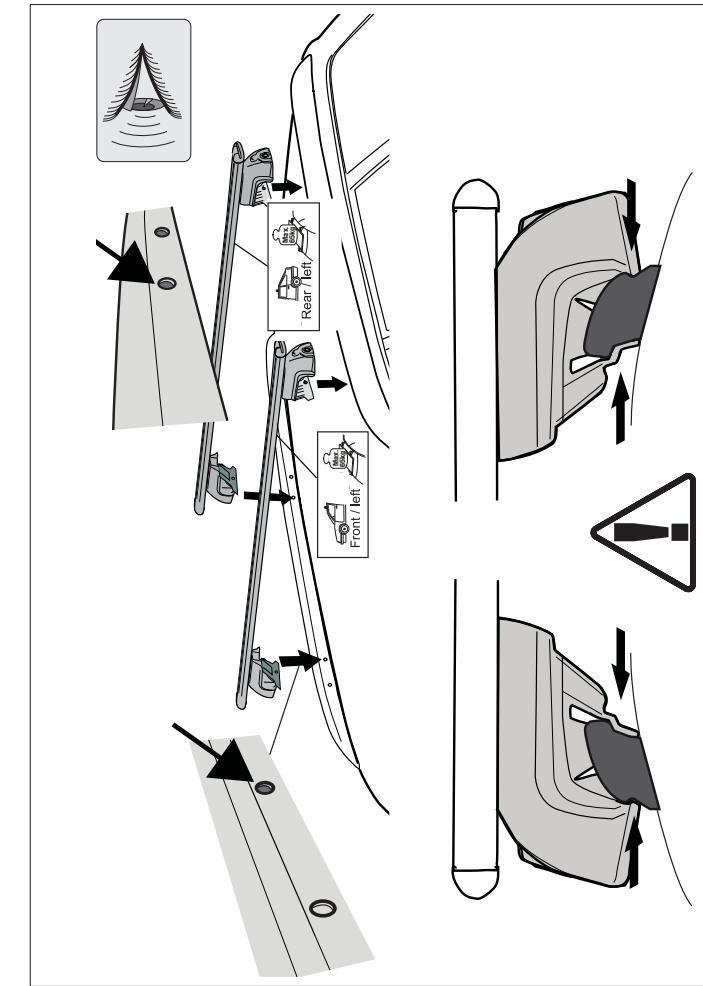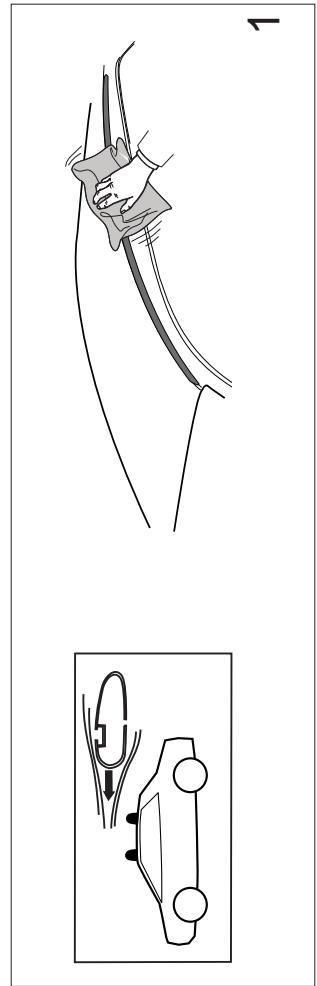


4 of 16

F1211ADE10AL REV 21/12/15

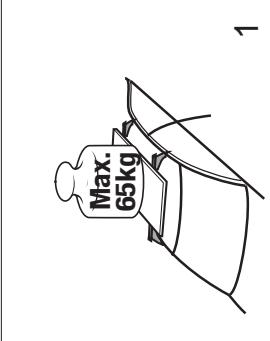


1


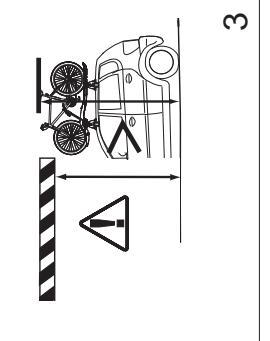


2

3

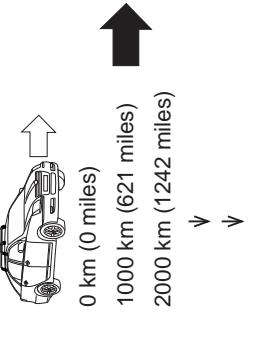

CHECK!

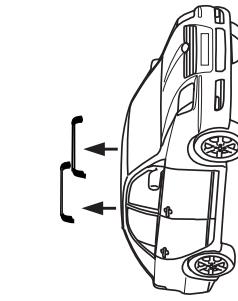

13 of 16

F1211ADE10AL REV 21/12/15

